


## Engine setting:

1: Reset to Factory Defaults



000B0

2: Set the communication mode to TTL/RS232 interface

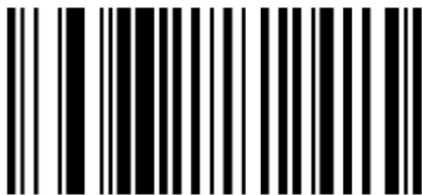

000601

TTL/RS232

3. Remove suffix



4: Turn off decoding sound



5: Set the above settings to the factory defaults




00000



00001


**wireless setting:**

1. Restore Wireless factory setting.

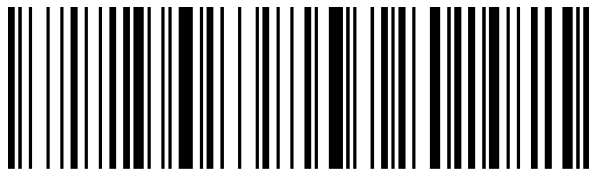

%%SpecCode93

2. Turn off "8s Bluetooth"

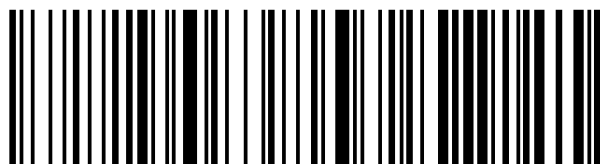


%%SpecCode78

3. Vibrate on



%%SpecCode77

4. Sleep in 30mins

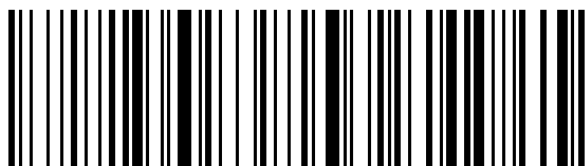


%%SpecCode35

5. Low voice



%%SpecCode95

6. IOS keyboard out/off setting

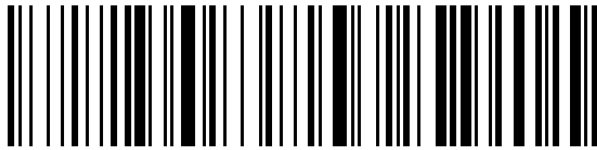

%%SpecCode7B

7. Add CR



%%SpecCode9C

## 8. Customize Bluetooth name



## 9. Bluetooth name: ScanAvenger




## 10. Save above settings as default



## Pairing to 2.4G

1. Enter 2.4G

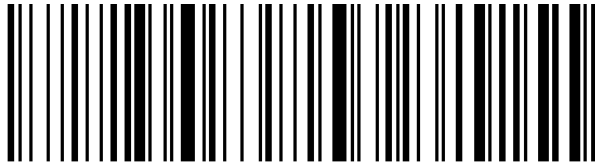

%%SpecCodeA8

2. Pairing to Dongle



%%SpecCode99