




ScanAvenger—Super Codes PC-Phone

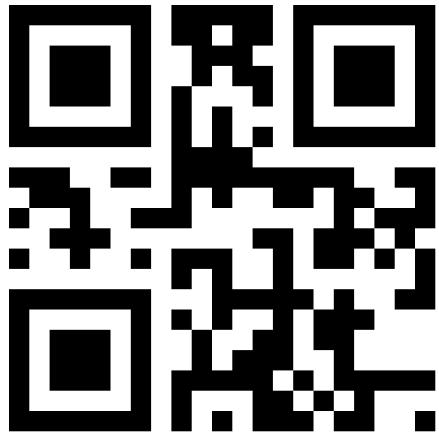


CTRL + C

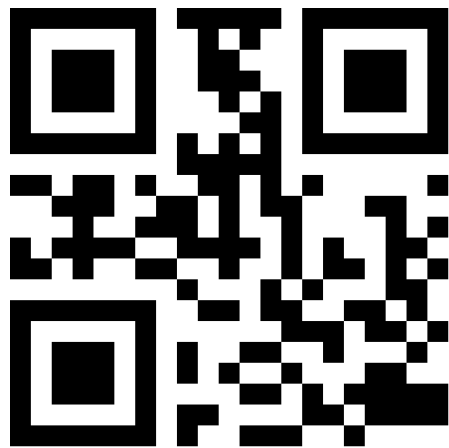


CTRL + A

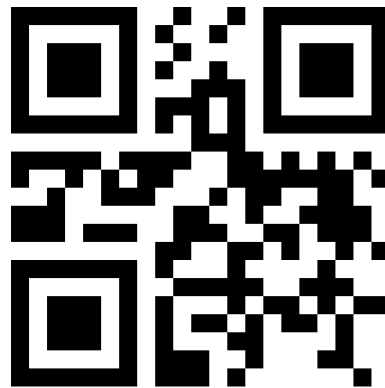

Normal
Scan Speed

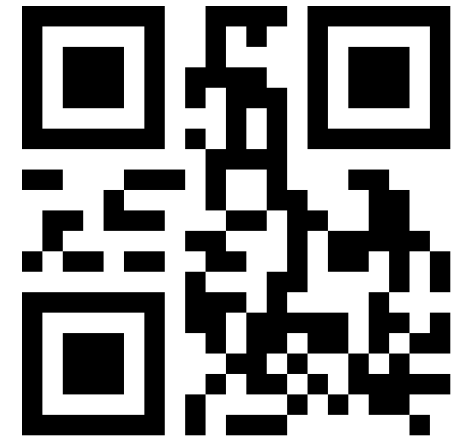

CTRL + V

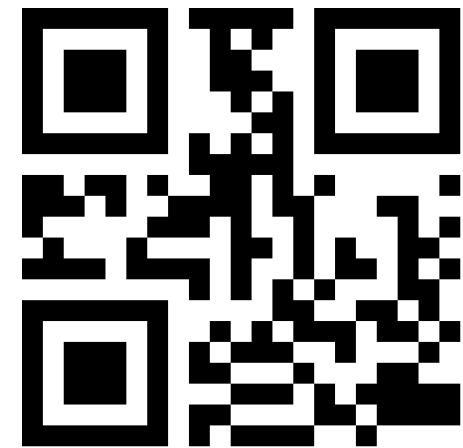

CTRL + B

For Bluetooth Pairing press button for 8 seconds V8.2

ScanAvenger—Super Codes PC-Phone



Slow (Google)

Scan Speed



Add TAB




Remove

TAB / Enter



Fast

Scan Speed

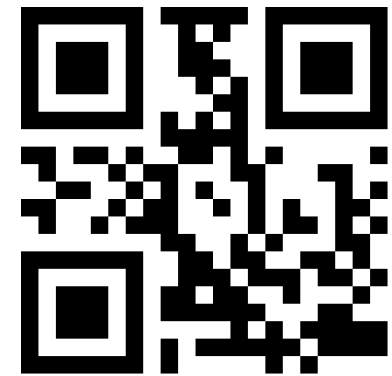

Add Enter

Double tap scanner button to enable iPhone keyboard

